



Materials

Cast Acrylic Lucite & Solid Brass Hardware

Metal Finish

- Polished Brass
- Satin Brass
- Polished Nickel
- Satin Nickel
- Chrome

Lucite

- Clear


Installation Instructions

1. Determine hole spacing by measuring your pull from the center of one mounting hole to the center of the other mounting hole.
2. Mark holes on your cabinet using a pencil, making sure that they are square level to your surface.
3. Drill holes using #16 drill bit (or 3/16").
4. Position pull in front of hole, then push the screw through from the interior side into the pull's screw hole.
5. Fasten screw by hand using a screwdriver. Be careful not to over tighten as this will strip the screw.

Care Instructions

Metal: Use a non-abrasive brass polish wadding, such as Brasso or Nevr-Dull.

Lucite: Clean with a soft cloth, using only dish soap and water.

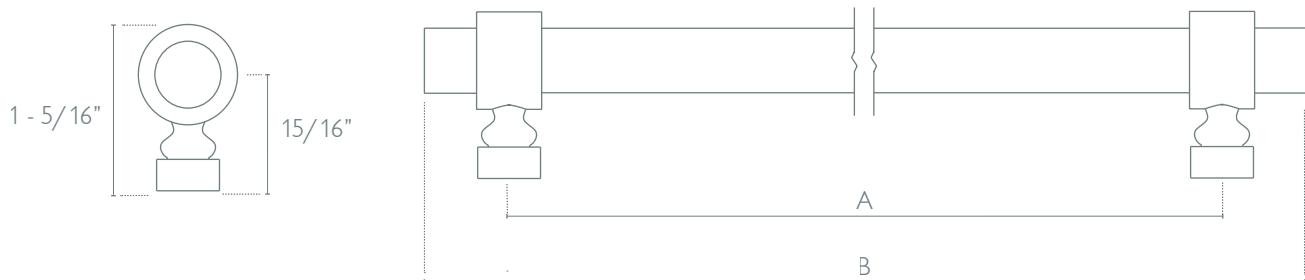

Center to Center (A)	Toggle	4"	5"	6"	7"	8"	9"	10"	11"	12"
Overall Length (B)	2 - 3/8"	5 - 1/4"	6 - 1/4"	7 - 1/4"	8 - 1/4"	8 - 1/4"	10 - 1/4"	11 - 1/4"	12 - 1/4"	13 - 1/4"

