



Mallory Arnett, Maison Luxe Interiors

Materials



Cast Acrylic Lucite & Solid Brass Hardware

Metal Finish

- Polished Brass
- Satin Brass
- Polished Nickel
- Satin Nickel
- Chrome

Lucite

- Clear

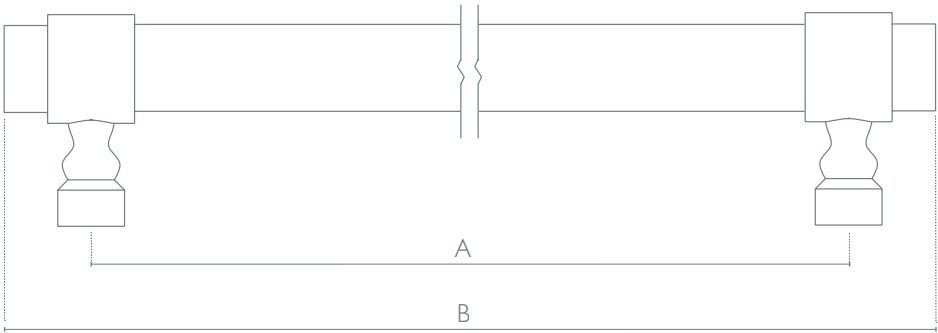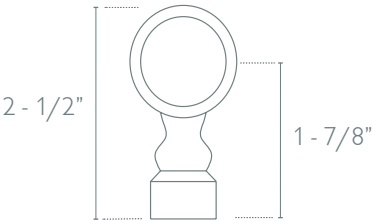


Center to Center (A)	6"	8"	10"	12"	14"	15"	16"	17"	18"	19"	21"	23"	25"
Overall Length (B)	8"	10"	12"	15"	17"	18"	19"	20"	21"	22"	24"	26"	28"



Installation Instructions

1. Position PULL 2 in line with both 3/8" holes in the glass
2. Push cone head screw through door hole, adding provided washers, into the pull's holes
3. Fasten screw until the base of the cone head secures the plastic washer against the door. Be careful not to overtighten.
4. Add PULL 1 so that the cone head inserts into the pull's hole. Make sure that the angled part of the cone head is in line with the set screw hole
5. Using the provided allen key, fasten the set screw to tighten the pull to the door.

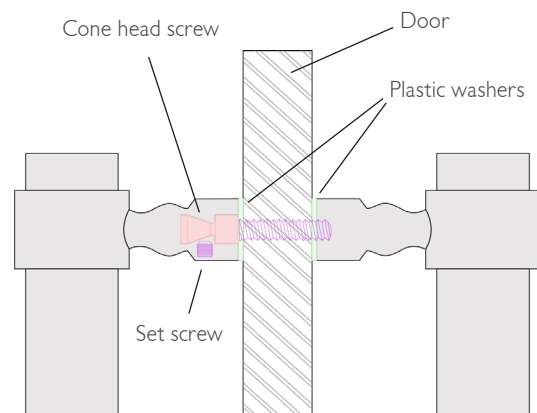

Care Instructions

Metal: Use a non-abrasive brass polish wadding, such as Brasso or Nev'r-Dull.

Lucite: Clean with a soft cloth, using only dish soap and water.

