




## Towel Bar - Modern Open Bracket (1" DIA)

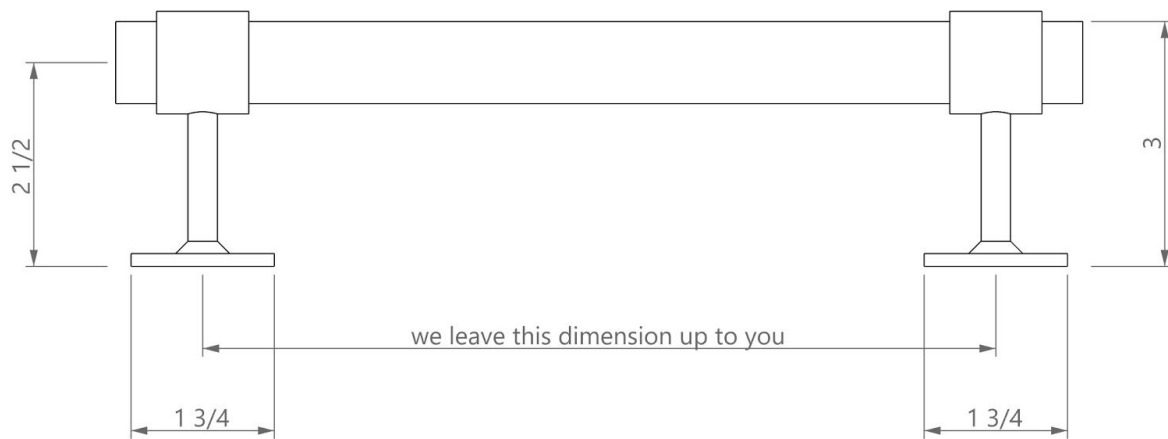

HARDWARE FINISHES	LUCITE FINISHES	ALSO INCLUDED
polished Brass	clear	4 x 1" #8 wood screw
satin Brass	night	
polished nickel	smoke	
satin nickel		
chrome		

### INSTALLATION INSTRUCTIONS

- ❖ Assemble on a flat surface. Make sure to place the brackets so that there is an equidistant reveal on both ends of the bar.
- ❖ When happy with placement, use provided allen wrench to tighten set screw. Tighten the set screw until you feel a little resistance and can no longer spin the rod in the bracket. Be careful not to over-tighten the set screw as this will damage the rod.
- ❖ Position the product at your preferred placement using a level, and mark hole placement using a pencil.
- ❖ Drill pilot holes (we recommended using a 1/8" drill bit) and insert a proper anchor for your wall material.
- ❖ Sink screws by hand with a screwdriver (using a drill for this step may damage the product and/or strip out the screws).

### CARE INSTRUCTIONS

- ❖ Brass, Nickel and Chrome: Use a non-abrasive brass polish such as Brasso wadding or Nevr-Dull wadding.
- ❖ Lucite: Dish soap and water.